



# Sequoia III™ Table Leg Installation Instructions

(Part #'s: TS4000, TS4004-P, TR4000C, TR4001C, TR4004C-P & TL4002C-XX)


## PARTS/TOOLS NEEDED:

				
Table Base	Floor Base	Table Leg	#10 Phillips Oval Head Screws (not provided)	Power Drill (Not Provided)

## INSTALLATION CONSIDERATIONS

- To avoid a hazard to children, account for all parts and destroy all packing materials.
- Do not sit on or lean on table, intended for use as a table only.

1. Mount the floor base into solid floor structure (wood, fiber-glass, etc.) using #10 phillips oval head screws.
2. Mount the table base onto table top (customer provided) using #10 phillips oval head screws. Make sure the weight of the table top is evenly supported over the table leg.

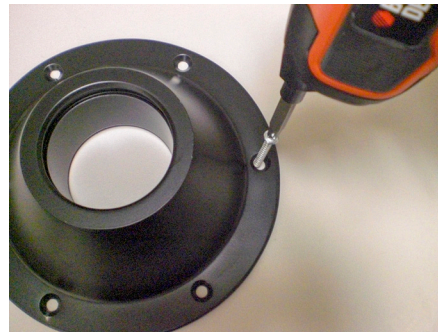


### 3. Insert The Leg<sup>1</sup>:

Line up the hole in the base with the blades on the leg. Push the leg down and twist clockwise until you feel some resistance, continue to turn until the leg clicks into place. Twist collar clockwise to tighten.

**Remove The Leg<sup>2</sup>:** Twist collar counter-clockwise to loosen. Twist the leg counter-clockwise until you feel resistance, continue to turn until you feel a click and the blades match up with the hole. Pull up to remove.



Turn past bump out on the bottom

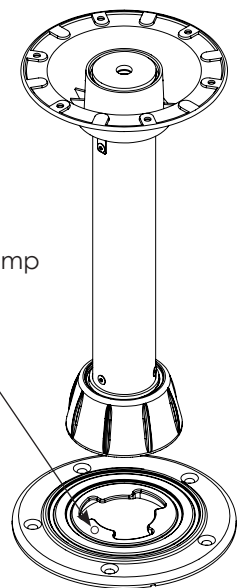

For warranty information please visit [www.itc-manufacturersselect.com/warranty](http://www.itc-manufacturersselect.com/warranty)

ITC Incorporated • 3030 Corporate Grove Dr. • Hudsonville • MI • 49426

Phone: 616-396-1355 • [www.itc-manufacturersselect.com](http://www.itc-manufacturersselect.com) • Doc #: MSTX400 • Revision A: 05.02.19