



Canopy Support Arm Installation

You will need a 1/8" hex key wrench, #2 screwdriver, and a flat-head screwdriver. Do not over-tighten any set screws during installation.

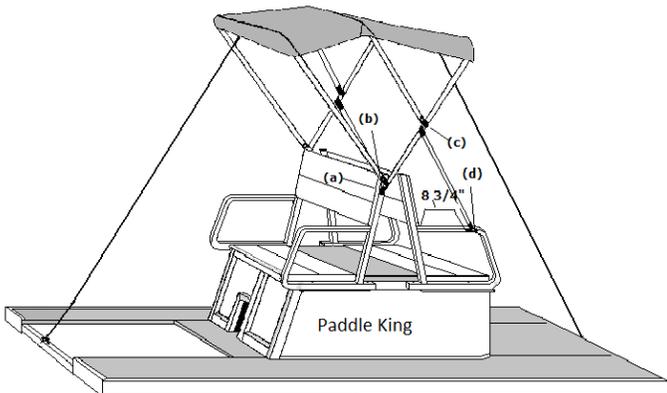

PK4400

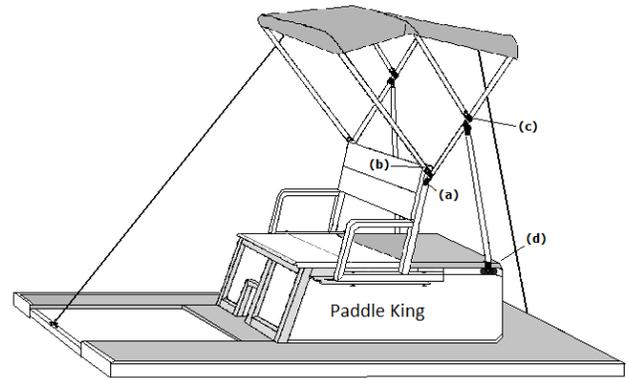

PK3000

1. Remove canopy from boat by unhooking front and rear straps and removing thumb screws.
2. Remove black eye-end(a) from end of rear bow. Repeat on opposite side of canopy.
3. Loosen set screw on jaw-slide(b) and slide off of rear bow. Repeat on opposite side.
4. Slide support arm jaw-slide onto rear bow leaving about 4.5" between it and the middle bow jaw-slide(c), and position the slot head screw to the outside of canopy. Repeat on opposite side.
5. Slide jaw-slide(b) back onto the rear bow, but do not secure yet. Repeat on opposite side.
6. Replace black eye-end (a) and tighten the set screw. Slide jaw-slide(b) flush to eye-end(a) and tighten screw. Repeat on opposite side.
7. **FOR PK4400:** Moving to the lower bracket (b), position the bracket horizontally on the edge of the arm rest 8 3/4" from the inside edge. Install the screws into the armrest, keeping the bracket in place.
FOR PK3000: Moving to the lower bracket (b), position the bracket right below the edge of the rear surface board so that the thumb screw is lined up directly below the back edge of the rear surface board. Install the screws into the boat, keeping the bracket in place
8. Position canopy on boat and install the thumb screw through the eye end and into the mounting bracket on the seat back (a). Repeat on opposite side.
9. Install the thumb screw through the support arm eye end and into the mounting bracket (d). Repeat on opposite side.
10. Re-hook and adjust front and rear support straps, making sure they are tight.

The canopy should be cleaned once a year and treated with a good marine canvas UV inhibitor spray such as 303® brand products.

For winter storage, the canopy should be taken off and stored inside (mice, moths and other insects love to nest in canvas, so the shed is not a good place to store canopy).

When trailering the boat, the canopy should be taken off.

